



PC-MANUAL




BC 16.12 / BC 16.12 STS 16 FUNCTIONS




Set language / Sprache einstellen / Sélectionner la langue / Selezione lingua / Seleccionar idioma / Taalkeuze / Wybór języka

English → Deutsch

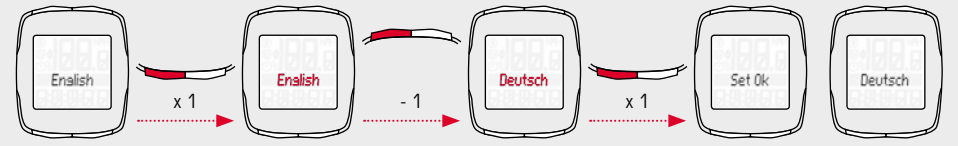


Set unit / Einheit festlegen / Définir l'unité / Impostazione unità / Determinar unidad / Eenheid vastleggen / Ustawienie jednostki

KMH → MPH

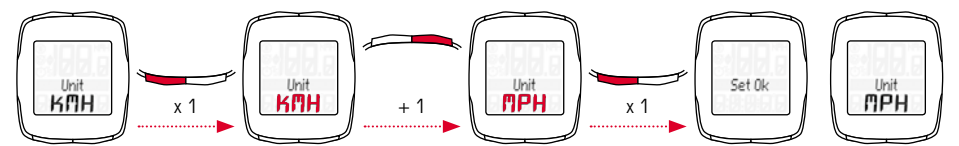


Set wheel size / Eingabe Radumfang / Réglage de la circonférence de la roue / Immissione circonferenza ruota / Introducción de las dimensiones de la rueda / Invoer wielomtrek / Zadání obvodu kola

2155 → 2136

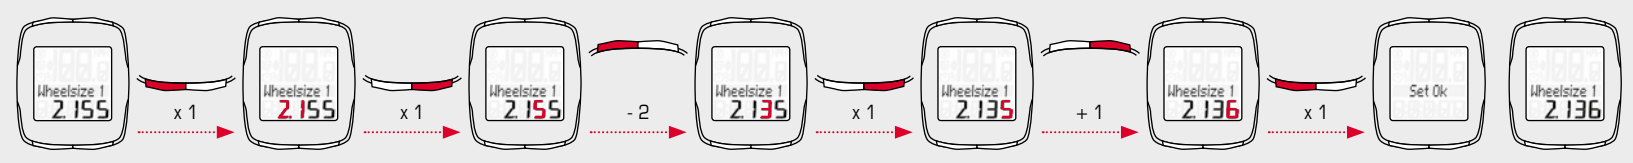


Set clock / Uhrzeit einstellen / Régler l'heure / Impostazione orario / Ajustar hora / Kloktijd instellen / Ustawienie czasu

00:00 → 15:36

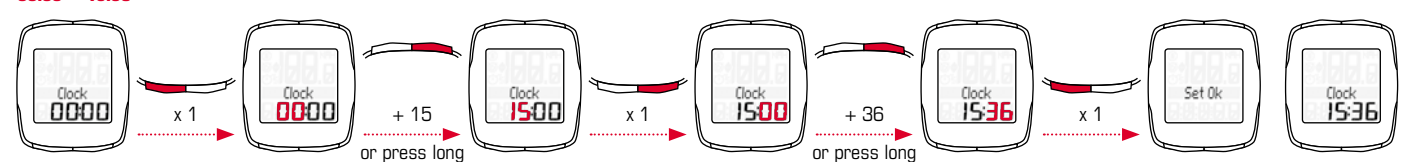


Set total distance / Gesamtstrecke einstellen / Régler la distance totale / Impostazione percorso totale / Ajustar tramos totales / Totale afstand instellen / Ustawienie całkowitej długości dystansu

0 → 2.325

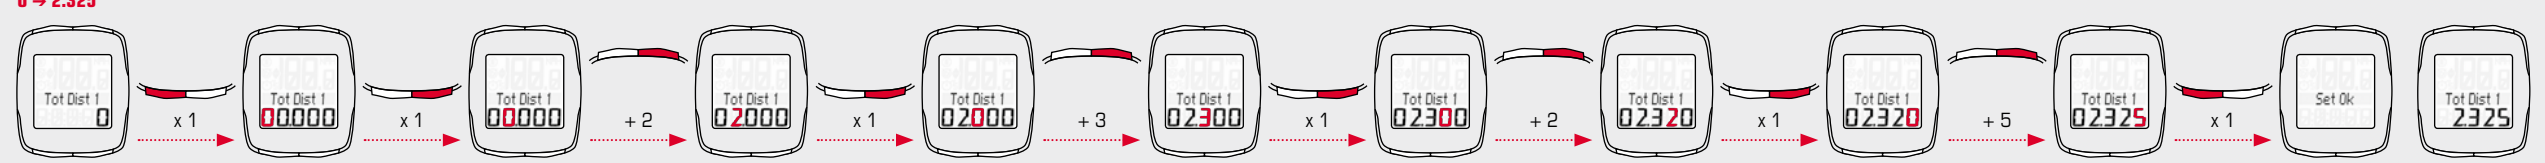


Set total time / Gesamtzeit einstellen / Régler la durée totale / Impostazione tempo totale / Ajustar tiempo total / Totale tijd instellen / Ustawienie czasu całkowitego

0:00 → 105:40

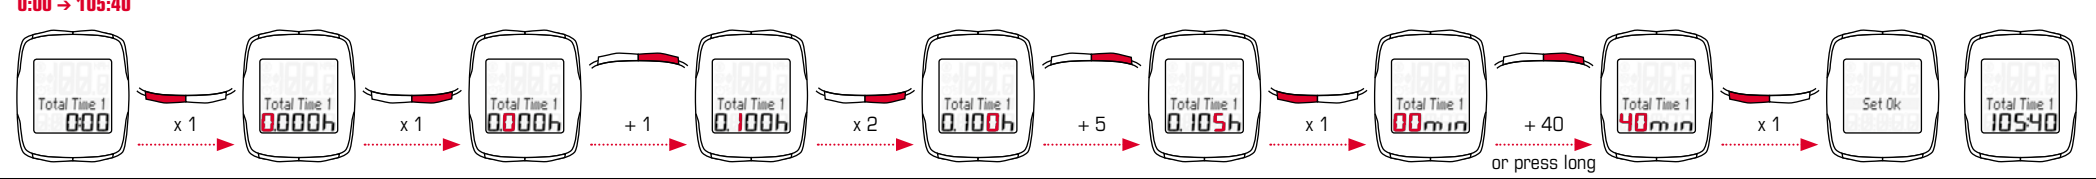


Set contrast / Kontrast einstellen / Régler le contraste / Regolare il contrasto / Ajuste del contraste / Contrast instellen / Ustawienie kontrastu

2 → 3

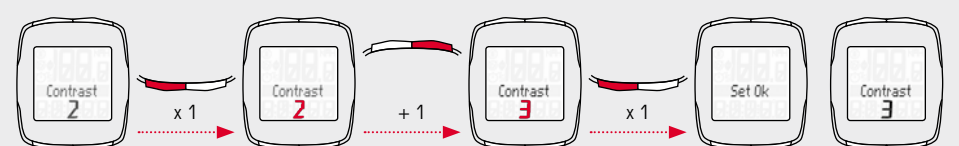


Setting menu / Einstellungs Menü / Menu réglages / Menu impostazioni / Menú de ajuste / Instellingsmenu / Menu ustawień

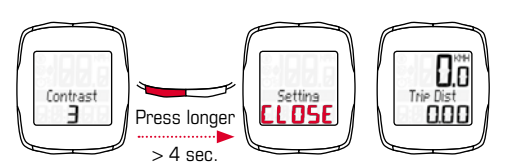


Reset / Nullstellen / Réinitialiser / Azzeramento / Colocar en cero / Op nul instellen / Zerowanie




Stopwatch / Stoppuhr / Chronomètre / Cronometro / Cronómetro / Stopwatch / Stoper

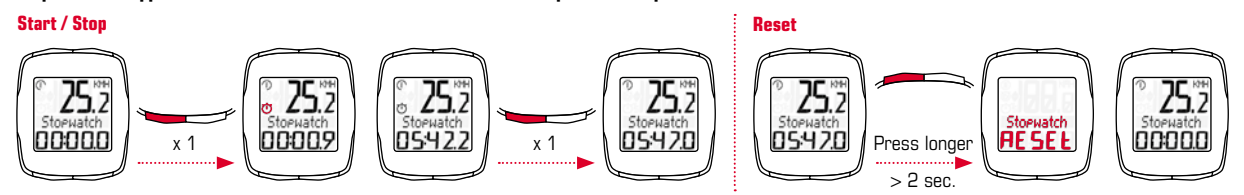


Countdown timer / Countdown Timer / Compte à rebours / Timer countdown / Cuenta atrás / Afeltimer / Minutnik

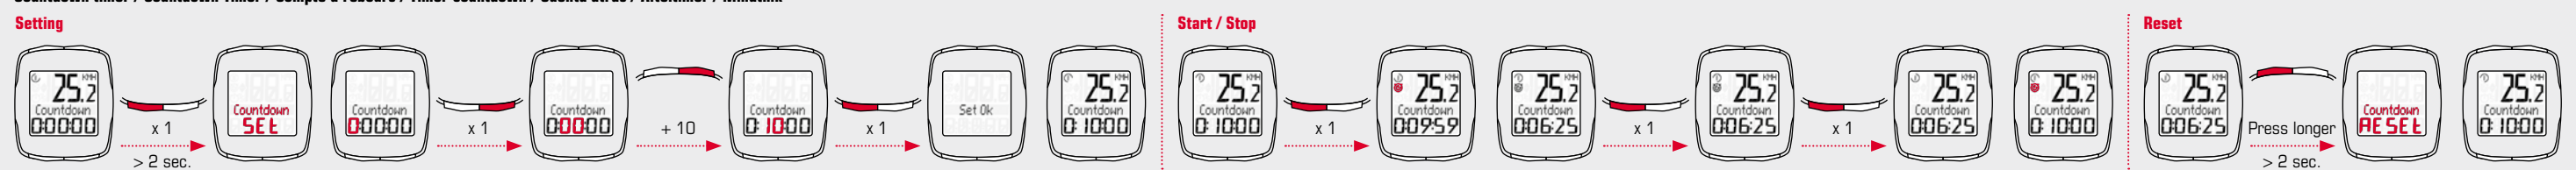

Trip Section Counter (TS) / Trip Section Counter (TS) / Compteur partiel (TS) / Trip Section Counter (TS) / Trip Section Counter (TS) / Trip Section Counter (TS) / Trip Section Counter (TS)

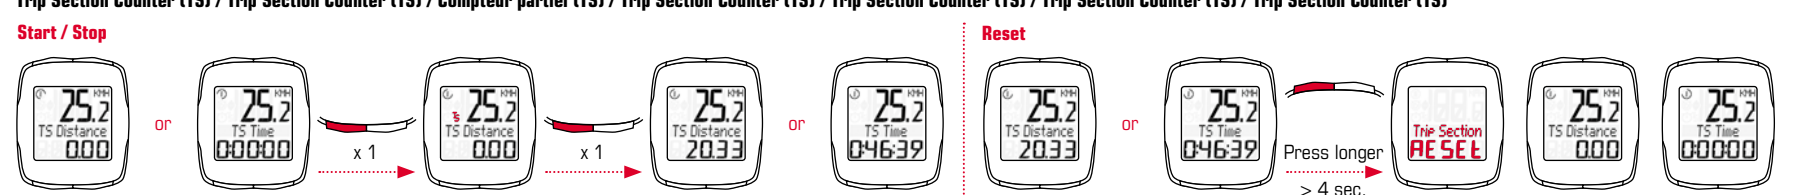

Lightmanager / Licht Manager / Gestionnaire d'éclairage / Gestione fanali / Regulador de luz / Lichtmanager / Menedżer oświetlenia

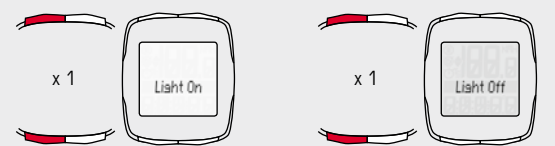

1. INSTALLATION OF THE BRACKET

1.1 Stem or handlebar?

1.3 → 1.4 → 1.5 1.2 → 1.3 → 1.4 → 1.5

1.2 Change handlebar → Stem

→ The mounting bracket included in the package is intended for handlebar mounting. For assembly on the stem release the 4 screws on the back, turn the plate by 90° and secure again.

90°

1.3 Installation of the bracket

→ Remove the yellow foil

1.4

? oder ou

1.5 a

1.5 b

1.6 Installation of the computer on the mounting bracket

CLICK

2. INSTALLATION OF THE WIRED SENSOR AND STANDARD MAGNET

2.1

2.2 Installation of the wired sensor

? oder ou

2.3 Installation of the standard magnet

CLICK

2.4 Adjusting of standard magnet

Max. 5 mm

3. INSTALLATION OF THE WIRELESS SPEED TRANSMITTER

3.1 BC 16.12 STS

? oder ou

3.2 Transmission range of STS speed transmitter

Max. 30°
Max. 90 cm

3.3 Installation of the power magnet

3.4 Adjusting of power magnet

Max. 12 mm

→ In order to achieve the necessary 12 mm or less install the transmitter and the magnet closer to the wheel hub.

4. INSTALLATION OF THE WIRELESS CADENCE TRANSMITTER

4.1 BC 16.12 STS CAD

? oder ou

4.2 Installation of the cadence magnet

? oder ou

4.3 Adjusting of power magnet/Transmission range of STS cadence transmitter

Max. 12 mm

max. 30°
max. 110 cm

5. BATTERY CHANGE / SWITCH BIKE 1 – BIKE 2

5.1 Change battery / Bike Computer

5.2 Change battery / Speed transmitter

→ Before replacing a new battery, wait for 1 minute

5.3 Change battery / Cadence transmitter

→ Before replacing a new battery, wait for 1 minute

5.4 Switch from Bike 1 to Bike 2 / STS Speed transmitter

→ Press > 5 seconds

→ Green LED is flashing = Bike 1

→ Red LED is flashing = Bike 2

6. WHEEL SIZE CHART

6.1 Wheel Size Chart

mm x 3,14

km/h:
WS = mm x 3,14
mph:
WS = mm x 3,14

km/h:
WS = mm
mph:
WS = mm

WS (mm)

ETRT0		ETRT0	
km/h	mph	km/h	mph
47-305	16x1.75x2	32-622	28x1.25, 700x32C
47-406	16x1.75	35-622	28x1.35, 700x35C
37-540	24x1.75	1948	37-622
47-507	24x1.75	1900	37-622
37-584	26x1.75	2086	40-622
37-590	26x1.75, 650 STD	2100	42-622
40-559	26x1.75, 650x35A	2030	47-622
42-559	26x1.50	2025	50-622
47-559	26x1.60	2050	54-622
50-559	26x1.75	2075	57-622
54-559	26x2.00	2100	60-622
57-559	26x2.10	2120	650x23C
57-584	26x2.25	2128	650x29C
28-630	27 1/8x2.25	2174	700x18C
32-630	27x1 1/4	2220	700x20C
40-635	27x1 1/4	2265	700x23C
	28x1 1/2	28-622	700x25C
			700x28C

7. PACKAGING CONTENT

Wired

Wireless